


- Notes:**
1. Do not scale drawing.
  2. Suitable reinforcing by others.
  3. Rixson design threshold available on request.
  4. Tighten adjusting screw to notched "V" line on arm to acquire standard initial location of door. Screw moves door towards and away from jamb to equalize door clearances.
  5. Provide 5/8" dia. holes for alignment screws (2 places).
  6. Do not remove grind plate until closer is installed.
  7. External stop by others required.
  8. All dimensions given in inches.

**50 Series Floor Closer  
Center Hung**

**RIXSON**<sup>TM</sup>  
Rixson Specialty Door Controls  
www.rixson.com

TEMPLATE NUMBER **CH20400** DATE **01-05**

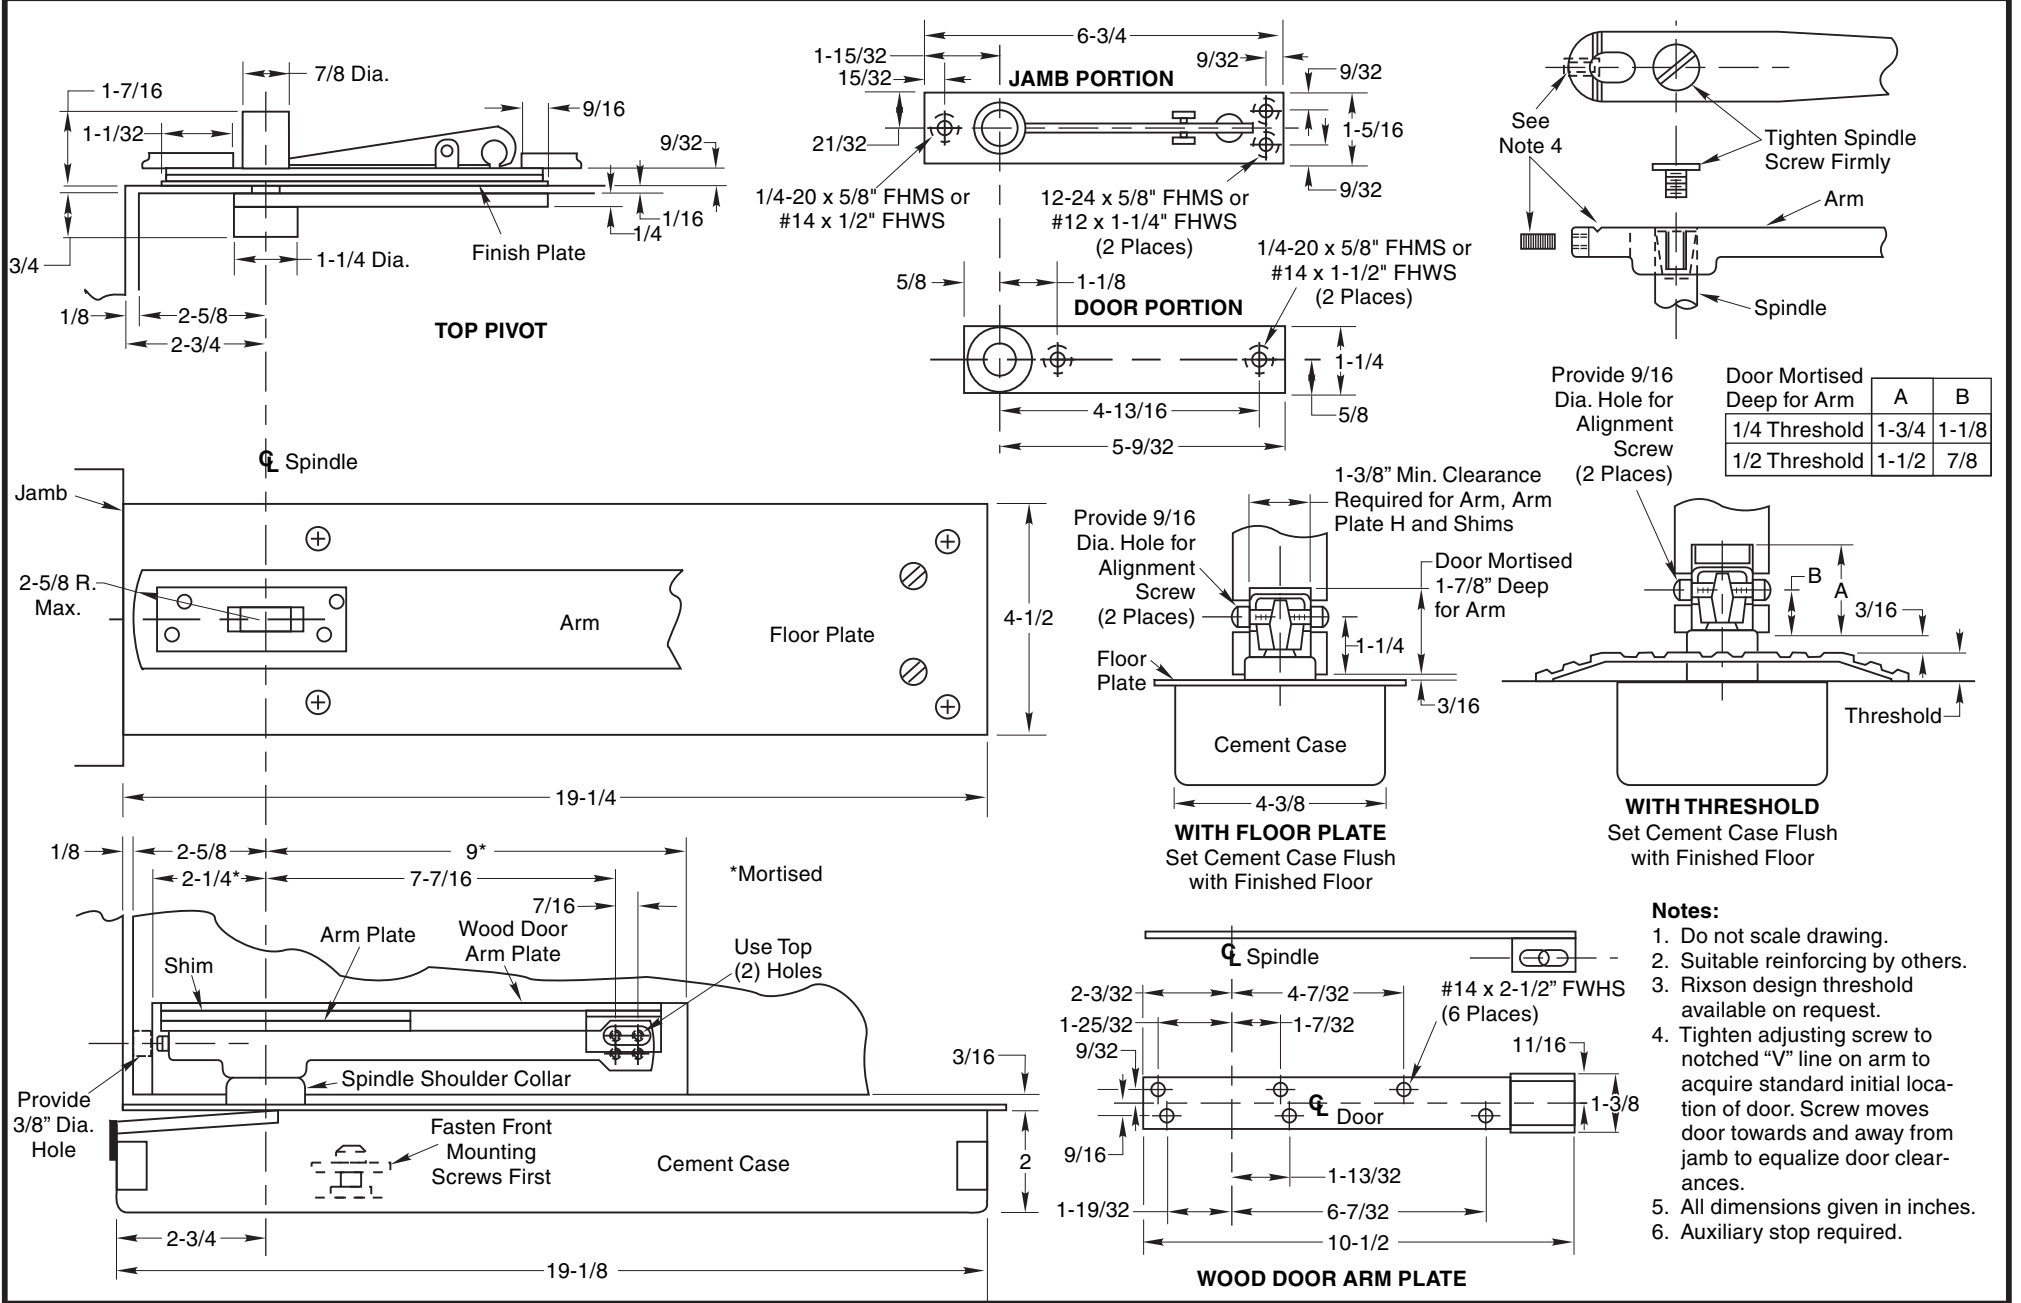

Door Mortised Deep for Arm	A	B
1/4 Threshold	1-3/4	1-1/8
1/2 Threshold	1-1/2	7/8

**W50 Series Floor Closer  
Center Hung for Wood Door**

**RIXSON®**  
**ASSA ABLOY**  
www.rixson.com

TEMPLATE NUMBER **CH20410** DATE **02-09**